

# Pre-identify LV and MV off line Cables and feeders



# JUPITER XE

CAUTION: Read this manual before using the device



**MADE**

167, Impasse de la garrigue

F 83210 LA FARLEDE

Phone. : +33 (0) 494 083 198

E-mail : [contact@made-sa.com](mailto:contact@made-sa.com) - Web : [www.made-sa.com](http://www.made-sa.com)

FQ 47B-EN - V1.12 - 14/10/2020



## MODIFICATION'S DIRECTORY

Rév.	Subject of Amendments	Date	Author
1.00	Creation	2021/04/28	T.Hubert
1.01	§4 Size and Weight, TX Battery access	2021/06/22	T Hubert
1.02	Correction §4	2022/01/27	T Hubert
1.03	Add special use cases	2022/03/23	L. Zomero
2.00	Correction §3.2.3	2022/05/16	T Hubert
2.01	Correction §3.2.3.2 & 3.2.3.3	2022/06/30	L. Zomero
3.00	Add security info+ESC	2022/10/14	T Hubert
4.00	New transmitter	2023/11/13	T Hubert
5.00	Correction sensor	2024/07/17	T Hubert

This manual is important for your safety. Read it carefully in its entirety before using the equipment and keep it for future reference.

# SUMMARY

<b>1.</b>	<b>SAFETY INFORMATION</b> .....	<b>4</b>
1.1.	Safety recommendations .....	4
1.2.	Following the safety recommendations .....	4
1.3.	Warning labels .....	5
1.4.	Intended use .....	6
<b>2.</b>	<b>OVERVIEW</b> .....	<b>7</b>
2.1.	Working Principle .....	7
2.2.	Composition .....	8
2.2.1.	Transmitter .....	8
2.2.2.	Receiver .....	9
<b>3.</b>	<b>IMPLEMENTATION</b> .....	<b>11</b>
3.1.	JUPITER XE TRANSMITER .....	11
3.1.1.	Overview of the Transmitter .....	12
3.1.2.	Transmitter general functioning .....	13
3.1.3.	Precautions for using the transmitter .....	15
3.1.4.	Battery .....	16
3.2.	JUPITER XE RECEIVER .....	16
3.2.1.	Use of receiver .....	20
3.2.2.	Batteries .....	24
<b>4.</b>	<b>TECHNICAL FEATURES</b> .....	<b>25</b>
<b>5.</b>	<b>MAINTENANCE, WARRANTY AND COPYRIGHT</b> .....	<b>27</b>
5.1.	Maintenance .....	27
5.2.	Warranty .....	27
5.3.	Copyright .....	27

This document is the JUPITER XE User's Guide. It describes the implementation of the device, as well as the different modes of operation to facilitate its use.

---

## 1. SAFETY INFORMATION

### 1.1. Safety recommendations

Please read this guide carefully before unpacking, configuring or using this equipment. Note all indications of danger and other warnings. Failing to observe these recommendations could result in serious injury to the operator or could damage the equipment. To ensure that the protection provided by this equipment is appropriate, do not use or install it other than in accordance with the conditions indicated in this manual.

Dismantling the cases is forbidden. This operation is limited exclusively to personnel qualified by MADE.

### 1.2. Following the safety recommendations





**DANGER:** Indicates a dangerous or potentially dangerous situation which, if not avoided, could cause serious or deadly injuries.

**WARNING:** Indicates a potentially dangerous situation which could cause superficial to moderate injuries.

**Remark:** Information requiring particular attention.

### 1.3. Warning labels

Read all labels and wordings shown on the instrument. Injuries or equipment damage could occur if these instructions are not respected.

	Symbol requiring reference to the instruction manual for instructions concerning operation or safety recommendations.
	Dangerous Voltage
	Ac current
IP XX	IP standard – Protection against dust and water
	Do not throw away with household waste

## 1.4. Intended use

JUPITER XE is an equipment allowing:

- Pre-identification of de-energized cables in excavations, gutters and cable trays, with short-circuited ends.
- Identification of dead conductors and continuity test to the transmitter called S1.
  - shorted end (closed circuit)
  - open circuit end

The device/system described in this documentation should only be operated by qualified personnel for each specific task. The documentation relating to this task must be observed, in particular the safety instructions and warnings. Qualified persons are, due to their training and experience, able to recognize the risks associated with the handling of this product / system and to avoid them.

JUPITER XE is intended for personnel authorized to work on electrical networks.

The documentation relating to each function must be observed, in particular the safety instructions and warnings. Qualified persons are, due to their training and experience, able to recognize the risks associated with the handling of this product and to avoid them.

All safety instructions imposed by the network operating company must be scrupulously respected.

The user of the material must have been trained in the handling of the material.



Its use is exclusively reserved for de-energized networks.

The cable to be identified must be consigned by an authorized agent and the 2 ends must be short-circuited and earthed.

A verification of the absence of voltage (VAT) must imperatively be carried out before use.

Wearing personal protective equipment (PPE) is mandatory (class 00 or higher electrical insulating gloves, helmet with protective face shield)



The material should not be used when at least one of its constituent parts is damaged.

### 2.1. Working Principle

- **Identification** of cables in a trench, gutter and in cable shelf.  
→ **With short-circuited ends**
- **Identifying the phases and checking cable continuity to transmitter S1**  
→ **With short-circuited ends** (closed circuit)  
→ **With open-circuit ends.**

The configuration required for each of these modes is described in this document.

Each of the functions is usually carried out on unpowered MV & LV cables (customer loads Off-line).

The signals and the physical principles used are common for each function.

The **JUPITER** system is made up of a Transmitter and a Receiver.


The removable transmitter is in a trolley case which also contains the various accessories.

The Receiver is in a soft carrying case which fits into the Transmitter case. This also contains the 3 sensors used for cable and conductor/phase identification:

- **Cable identification**
- **Continuity and core identification in open circuit.**
- **Continuity and core identification in short circuit**

## 2.2. Composition

### 2.2.1. Transmitter

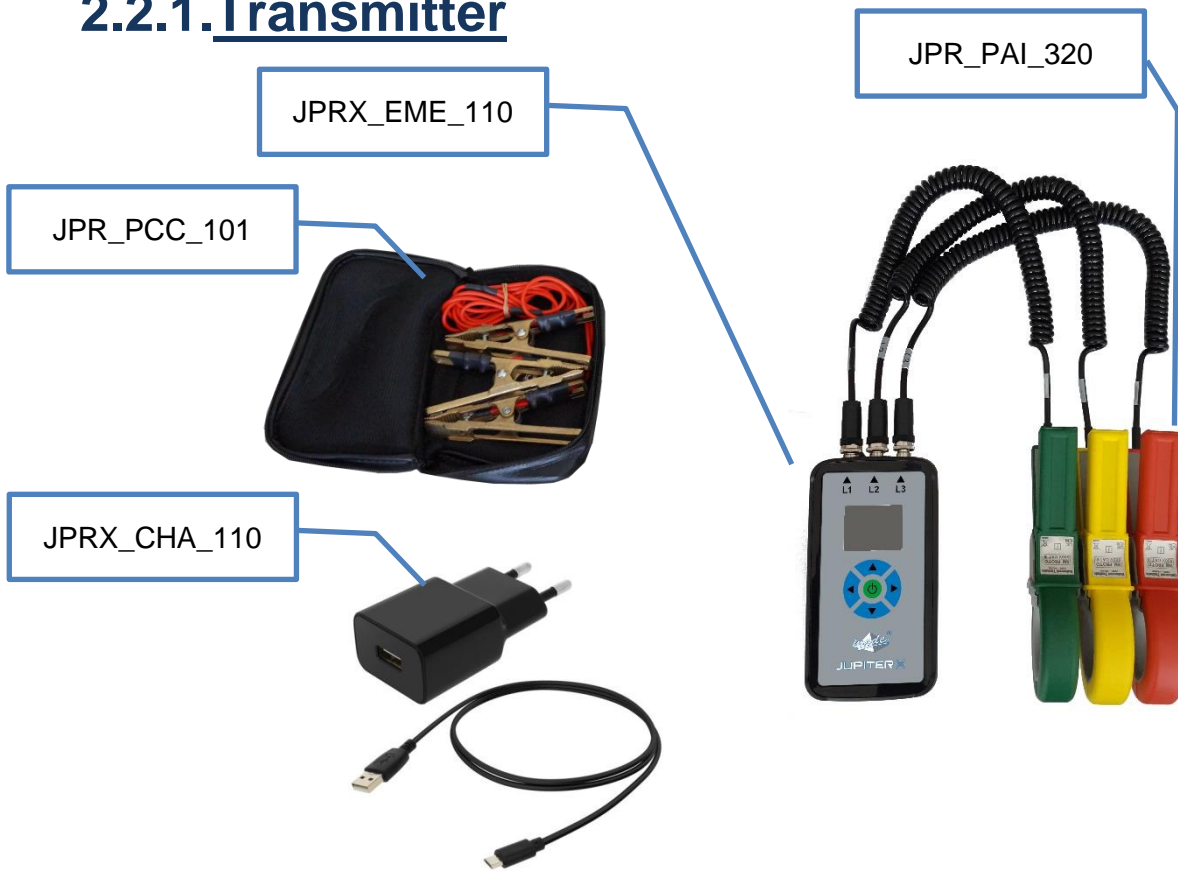


- 3 current clamps with their connecting cable (ref JPRE\_PAI\_300)
- 220V~ supply cable (ref JPRE\_CHA\_110)
- 1 Short-Circuiting cable (ref JPR\_PCC\_101)
- 1 transmitter (ref JPRE\_EME\_110)



Attention: the transmitter must only be operated with the accessories supplied by the company MADE



## 2.2.2. Receiver

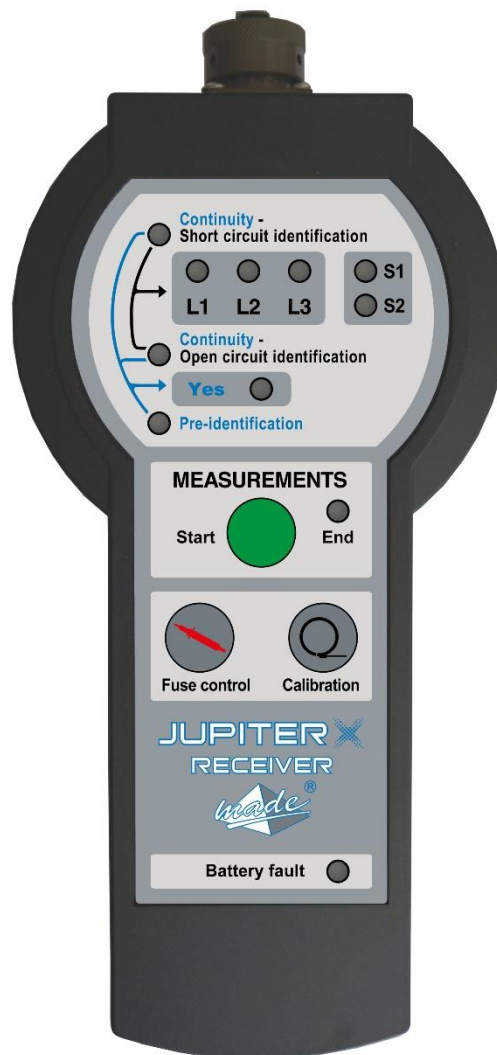

Attention: the receiver must only be operated with the sensors supplied by the company MADE

### 2.2.2.1. Standard Sensors

- **Sensor for « Core identification, short-circuited ends » :**



Ref: JPRX\_CAP\_410

- **Sensor for « Core identification, open circuit ends » :**



Ref: JPRX\_CAP\_220

- **Sensor for identification :**



Ref: JPRX\_SAB\_100

---

## 3. IMPLEMENTATION

### 3.1. JUPITER XE TRANSMITTER

From turn-on by the operator, the Transmitter is activated and generates the frequency signals necessary for identifying unpowered MV & LV cables.

It is possible to turn the **JUPITER XE** Transmitter on S2 mode (with different frequencies) for a utilization with two Transmitters at the same time at the ends of a cable, one in S1 mode and the second on S2 mode.

The type of utilization allows cores identification in open circuit once the cable is cut at both ends without moving the Transmitter (useful operation with replacing a joint for example). This Transmitter allows only an utilization in S1 mode, or S2 mode with another Transmitter in S1 mode.



**Only one JUPITER XE Transmitter in S2 mode does not allow core identification in open and short circuit function!**

The possible operations are:

- **Identification of cables** (Short-circuited ends)
- **Continuity and identifying the cores with open circuit ends (after cutting the cable)**
- **Identifying the cores with short circuited.**

**Once the Transmitter is started, no further action by the operator is necessary to activate the functions described below.**


When turned-on, the Transmitter is on S1 mode. A press on S1/S2 button activates S2 mode. Another press turn the Transmitter back to S1 mode.

These functions are possible on an unpowered MV or LV network and for all types of cables:

HN, Paper, PE.

**When used on an LV network, it is not necessary to disconnect the customer loads.**

### 3.1.1. Overview of the Transmitter

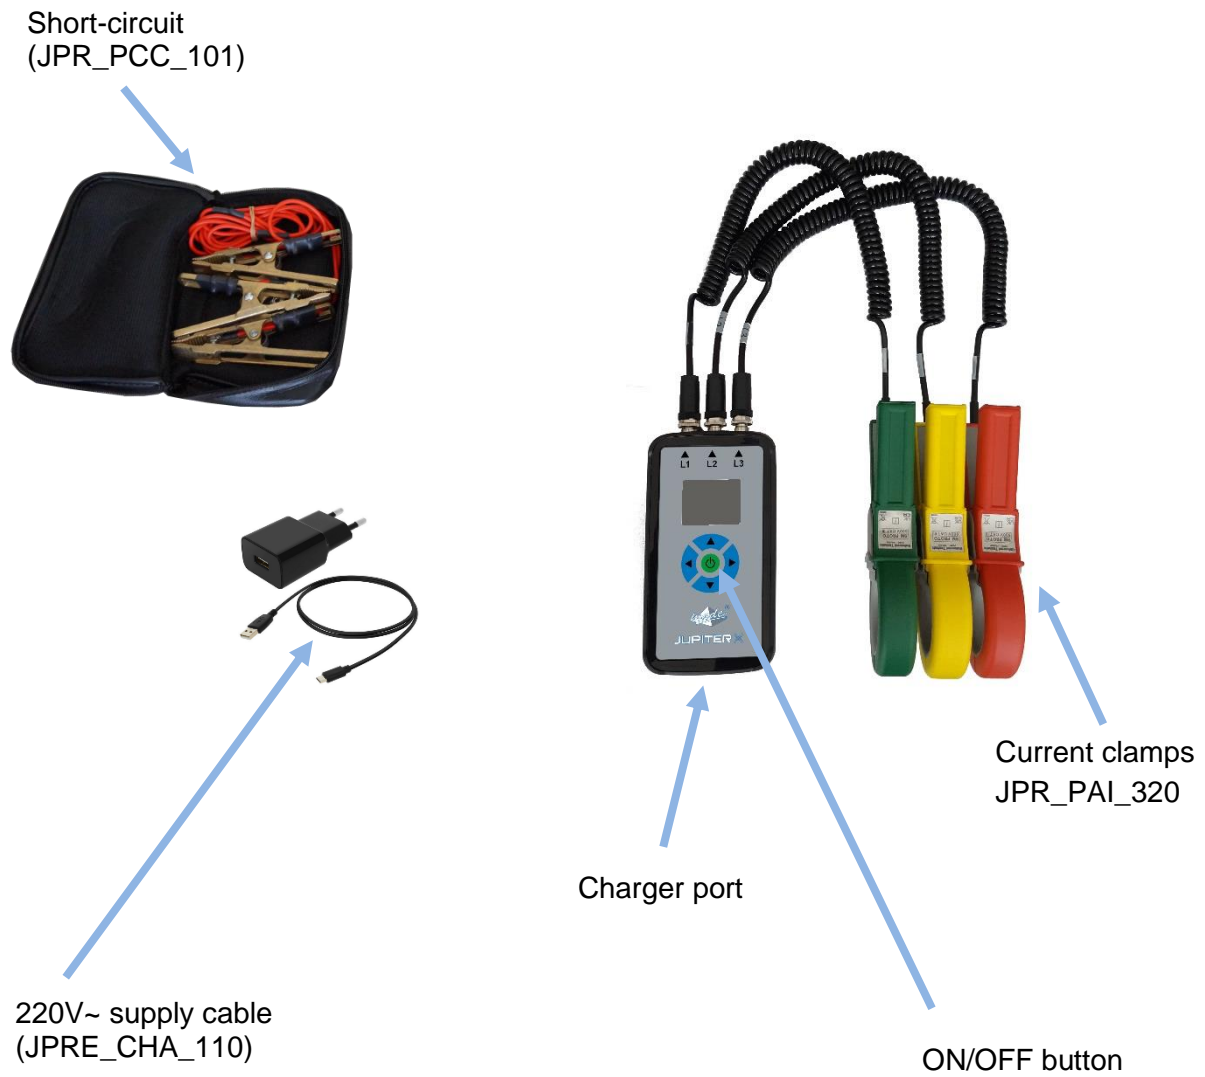

## **3.1.2. Transmitter general functioning**

### **3.1.2.1. Power supply**

The JUPITER XE Transmitter runs on 1.5Ah 6.4v DC batteries.

When turned on, the charge level of the battery is indicated on the front face. The minimum autonomy of the transmitter is 8h.

The transmitter can run on internal batteries or during the charge when using the external charger connected on the side of the case.

To charge the transmitter, please refer directly to the instruction on the charger

The continuous use of this type of charger enables the long term storage of the Transmitter, whilst maintaining the battery in optimum charged condition (charger connected).



Warning: when using the transmitter while charging the battery, the charger must be placed indoors, away from any splashing water and flammable agents.

The charger must be connected to an overvoltage category II mains socket.

During recharging, the charger plug serves as a disconnect device, it must remain easily accessible

### 3.1.2.2. Transmitter functions

The JUPITER XE transmitter consists of:

Three electronic power generators (internal)

An internal component monitoring unit that:

Detects any faults in the transmission circuits (overcurrents or low currents) and indicates which clamp is affected.

Monitors the discharge level of the battery: transmission automatically stops if the battery reaches a discharge level that could affect its life.

A graphic display that indicates:

S1 or S2 source selection.

Transmission power level (10% or 100%).

Battery level

Error messages

A connector to charge the battery

### 3.1.2.3. Transmitter connection

- The transmitter is connected on the near end of the cables using the current clamps on the connection case. Both cable ends are short-circuited and can be earthed (Do not include the cable screen).
- Ensure that both cable ends are short-circuited, using the appropriate connection wires.




The loop located at the end of the short circuit must be connected to the security padlock

- Turn on the transmitter.

It is better to place the current clamps before starting the transmitter.

If not, opening the clamps during transmitter causes the clamp fault lights to illuminate.

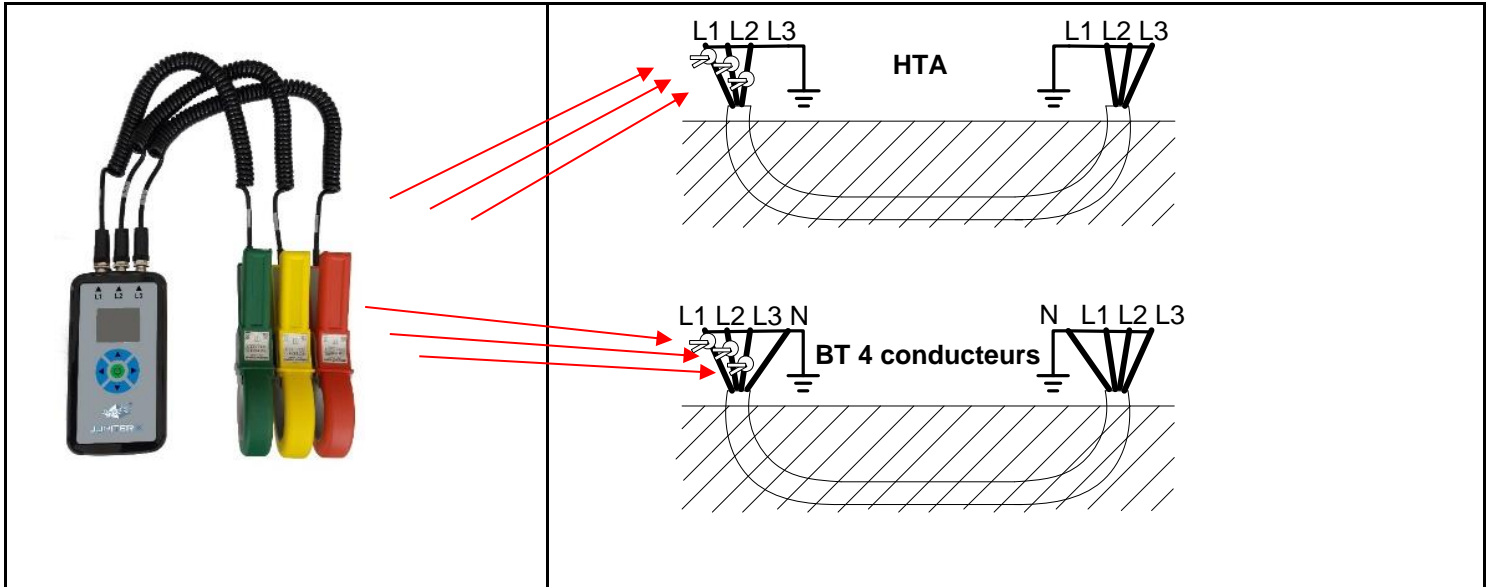

So as to enhance the continuity, the end user needs to use the two accessories, one inside the transmitter and one inside the receiver. (Additional short circuit included in the product, ref JPR\_PCC\_101):



This will ensure that the balancing of the injected signal is perfect. Note that the quality of the contact can be altered by corrosion or dirt, typically on Medium Voltage.

### **3.1.3. Precautions for using the transmitter**

**THE CURRENT CLAMPS MUST ALL HAVE THE SAME ORIENTATION WITH RELATION TO THE CABLE END (Indicated by the arrows on the clamps).**

**CHECK THAT THE CLAMPS ARE ON AN UNSCREENED LENGTH OF CABLE. IF NECESSARY, USE WOODEN CLAMPS OR TAPE TO HOLD THEM IN POSITION.**

**TO AVOID RISK OF ERROR IN CABLE DESIGNATION, USE ONLY ONE JUPITER X TRANSMITTER ON A SITE.**

**AFTER TURN-ON, CHECK ON THE FRONT FACE:**

- **THAT THERE ARE NO TRANSMISSION CIRCUIT FAULTS**
- **THE BATTERY CHARGE LEVEL**

### **3.1.4. Battery**

The transmitter is powered by a 6.4 Volt battery.



The replacement of the battery must be carried out by an authorized and trained person

## **3.2. JUPITER XE RECEIVER**

The JUPITER X Receiver assembly consists of:

- **The Receiver to which are connected the sensors**
- **Inductive sensor for identification**
- **Probes for core identification and continuity with open circuit.**
- **Flexible Identifying loops for short-circuited core identification**

The Receiver and its sensors are supplied in a carrying case, which itself fits into the lid of the Transmitter case.

The JUPITER XE Receiver is used to **identify** a cable of which the extremities are in short-circuit and earthed, to **identify the cores** in an **open or closed circuit** cable.



This is done in normal operation on **unpowered** HV & LV networks.

The JUPITER XE Receiver is equipped with sensors dedicated to each function to « extract » the signals emitted by the JUPITER X Transmitter.

The results obtained, by the Receiver, require no interpretation, the detection

Receiver with its various sensors



Socket for sensor connection

Indication of the transmitter source of the signal

Measurement display in core identification mode

Measurement display in identification and continuity mode


End of measurement indicator

On and measurement initiation button

Fuse testing

Calibration mode on short cable

Battery fault indication

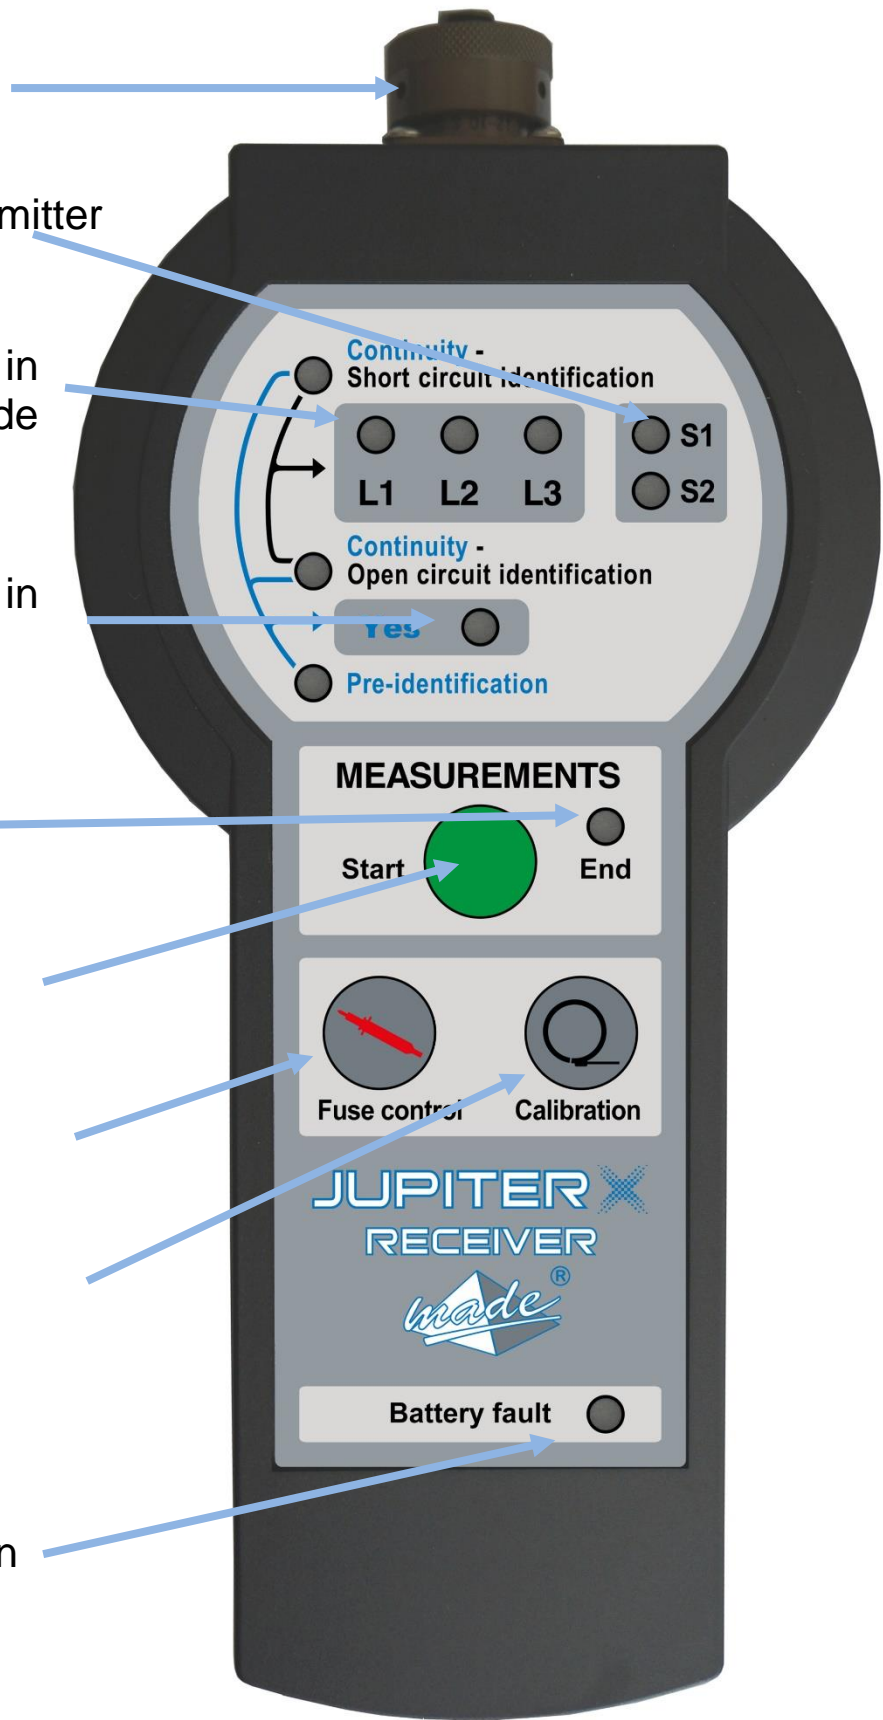

Ref: JPRX\_RXE-300

### 3.2.1. Use of receiver



The receiver must be handled with electrically insulating gloves. The shape of the receiver housing allows the hand to be positioned as far as possible from the contact area of the sensors



Connecting a sensor to the Receiver automatically sets the operating mode which is indicated by a LED.

These modes are:

- Continuity and Identification in short-circuit
- Continuity and Identification in open-circuit
- Pré-identification

One press of the « **Measurements** » button turns on and illuminates the LED corresponding to the mode selected by the chosen sensor, which confirms to the operator the type of measurement to carry out.

After 30 seconds with no press of the « **Measurements** » button, the Receiver switches off until a new button press.

If there is no sensor connected, one press on « **Measurements** » button illuminates during 1 second all LEDs to be sure they are all operational.

Certain modes are only available when the Transmitter is in S1 mode or when two Transmitters, one in S1 mode and the second on S2 mode are connected to the ends of the same cable. A transmitter in S2 mode only does not allow core identification in open-circuit or short-circuit. This kind of utilization automatically appears when two transmitters in S1 and S2 mode are connected to the same cable and that this cable is cut after pre-identification.

### 3.2.1.1. Pre-identification mode

A pre-identification sensor for all type of cable (JPRX\_SAB\_100)



Mode only usable with a transmitter in S1 mode or two transmitters in S1 and S2 mode.

- Connect the sensor to the receiver, the pre-identification light illuminates.
- Place the sensor on the cable, so that the groove under the sensor fits around the cable.
- Press the « measurement » button, the « **end of measurement** » light turns off.
- Wait for the result (6 seconds) without moving the sensor, the « **end of measurement** » light illuminates and if the cable is pre-identified, then the YES LED illuminates.
- If the cable is not pre-identified, repeat the operation on other points of the cable with 10cm of distance between them.

- If the answer is YES, it is always good to confirm this by repeating the measurement at several points along the cable.

**The receiver indicates by « YES » the identification of the cable.**

### 3.2.1.2. Core identification in open circuit and continuity to S1 Transmitter mode



JPRX\_CAP\_220



*A voltage absence check is required before using this mode*

- Connect the red probes to the receiver, press the « Start » button, the “**Open circuit identification**” LED illuminate.

**Do not forget to test the fuse**

- Before each use, touch the 2 test probes and press the « Fuse control » button.
  - If the fuse is good, the YES and END of measurements LED illuminates.
  - If the fuse is blown, the YES LED remains off and the END of measurements LED illuminates


In this case replace the fuse.

Unscrew the test probes and replace the fuse with an identical one (2A 500VAC / HPC 50KA)

Mode usable in all cases.

- The cable being cut, probe any 2 cores of the 3.
- Press the « measurement » button, the « end of measurement » LED turns off.
- Wait for the result (3 seconds), the « end of measurement » LED turns on.
- The result will depend on the probed cores and on the cable extremity they are connected to :
  - If the probe is connected towards S1, the LED “YES” for the S1 continuity turns on.
  - If the phase is identified, the L1, L2 or L3 LED illuminates.
- Repeat the operation to identify the other cores.

**The receiver designates the free conductor.**

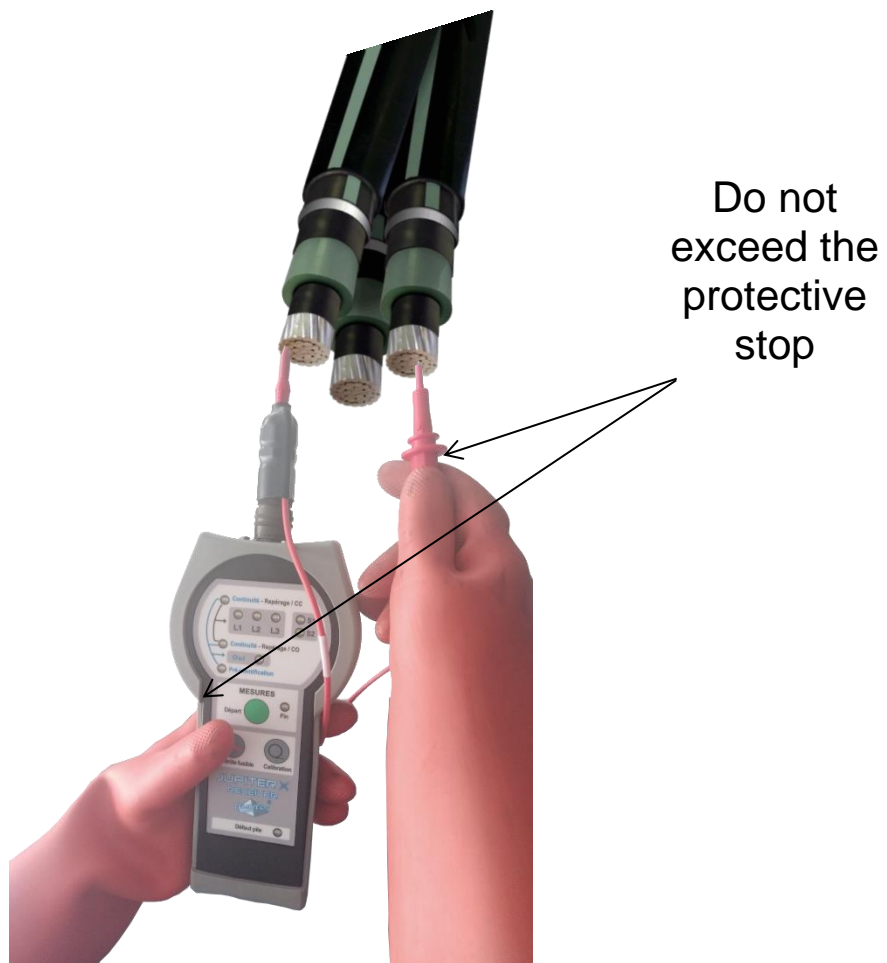



### 3.2.1.3. Core identification and continuity in short circuit mode



JPRX\_CAP\_410

Mode usable in all cases

- Connect the loop for core identification in short circuit to the receiver, press the « measurement » button, the “**Short circuit identification and S1 continuity**” LED switches on.
- Put the loop around the core to identify, and close it.
- Press the « measurement » button, the « end of measurement » turns off.
- Wait for the result (3 seconds), the « end of measurement » turns on.
- If the core is identified, the L1, L2 or L3 and the **YES** LED illuminates.
- Repeat the operation to identify the other cores.

**The receiver designates the core within the loop.**

### 3.2.2. Batteries

The Receiver is powered by two 9 Volt batteries.

When the battery charge level is insufficient for correct operation of the Receiver, a LED indicates the fault.

To Change the Batteries: Unscrew the battery compartment on the bottom of the receiver and replace the 2 batteries with similar ones.

**Pay attention to the direction of the batteries**





*Warning: replace the batteries with equivalent models, of the 6LR61, 9V alkaline type.*

*Do not replace batteries with Lithium types*

## 4. TECHNICAL FEATURES

Characteristic.	Transmitter	Receiver
<u>Size</u>	210mm x 110mm x 45 mm	228mm x 117mm x 41mm
<u>Weight</u>	2.150 Kg	0,450 Kg
<u>Total size</u>	555mm x445mm x258mm	
<u>Total weight</u>	<b>Transmitter and receiver in the trolley case: 14 kg</b>	
<u>Supply</u>	<b>Battery</b> : 6.4V – 1.5 Ah, lead type <b>Minimum autonomy</b> : 4h for continuous use <b>Charger</b> : 100 - 240 V AC 50/60 Hz  Use of the transmitter is possible while the battery is recharging, provided the charger is positioned away from any risk of water spray and flammable agents.	2 PP3 9V batteries <b>Minimum autonomy</b> : 2000 measurements
<u>IP standard</u>	<ul style="list-style-type: none"><li>• IP54 transmitter box with injection pliers connected (outdoor use possible).</li><li>• IP20 injection pliers</li></ul>	<ul style="list-style-type: none"><li>• IP54 receiver box with cap on the connector or a connected sensor.</li><li>• The JPRX_SAB_200 sensor is IP20</li></ul>
<u>Operating temperature</u>	-15°C / + 50°C	<u>-15°C / + 55°C</u> -20°C / + 60 °C
<u>Storage temerature</u>	-20°C / + 60°C	
<u>Relative Humidity</u>	Max. 85% RH at 40 °C, without condensation	
<u>Degree of environmental pollution</u>	3	
<u>Altitude</u>	Up to 2000 m.	
<u>Fuses</u>		2A 500V 50KA Fast 6.3 x 32 mm
<u>Batteries</u>	Consumption during injection: up to 1.5 A depending on the length of the cable to be identified (with or without charger) Contact MADE SA for battery replacement. The replacement must be carried out by an authorized and trained person	Alcaline 6LR61 9V Consumption : 25mA under 9V

Characteristic of the signal injected into the cable:

- Operating voltage: 1V
- Min/max current: Between 10mA and 20A, depending on the cable impedance and the quality of the short circuits.
- Frequency range: 420Hz –to 610Hz

Marks : 

Standards applied : NF EN 61000-6-2 et NF EN 61000-6-4

---

## **5. MAINTENANCE, WARRANTY AND COPYRIGHT**

### **5.1. Maintenance**

Dismantling systems is forbidden. This operation is limited exclusively to personnel qualified by MADE.

Never use solvent, or a solvent-based product, to clean the system and / or its accessories.

For cleaning and maintenance of JUPITER XE, it is sufficient to:

- Check that the **sensors** are clean : wipe off with a dry cloth
- Do not use corrosive products to clean the instrument faces
- Use only the accessories delivered with the system
- Follow a training programme by a qualified person

### **5.2. Warranty**

Our warranty and general sales are available and sent by MADE-SA at the customer's request

### **5.3. Copyright**

© All reserved rights. The distribution and the copying of this document, as well as the use and the communication of its content, are forbidden without written authorization of MADE.

The content of this document is destined for use only as information. It can be modified without prior notice and must not be considered as an obligation by MADE.

MADE declines all responsibility for mistakes or inaccuracies that the present document may contain.